

Silvaflame-Cleervue Co Ltd

GRINDING MACHINE GUARDS SGB/ST/ST1

DESCRIPTION

Our Grinder Guards SGB and ST are made of Moulded Nylon Frames with 5mm thick clear Polycarbonate visor giving a high level of protection from any sparks or debris.

The ST1 takes this a step further having a cast aluminium frame and 5mm visor.

The ST1 requires a clearance hole and has 2 nuts to lock off at the desired height.

The SGB and ST mount to the casing of the grinder by simply drilling and tapping the case.

UNPACKING

Check for shipping damage. If damage has occurred, a claim must be filled with carrier. Check for completeness. Immediately report any missing parts to the dealer.

SAFETY RULES

Warning: For your own safety, read all the instructions and precautions before operating tool.

Caution: Always follow proper operating procedures as defined in this manual - even if you are familiar with use of this or similar tools.

Remember that being careless for even a fraction of a second can result in severe personal injury.

ASSEMBLY

Our Grinder Guards come part assembled, with the visor in the frame.

The rod just needs putting through the hole on the top of the frame and tighten when at the desired height using the pinch bolt.

The rod then simply screws onto the bracket that fixes to the grinder.

INSTALLATION

ST/ SGB

1. First assemble the guard and place it onto the grinder so you can see where it is best to be mounted.
2. Once you have decided the best place mark the two holes with a pen.
3. Drill and tap M5.
4. Simply screw the guard onto the casing.
5. Adjust the guard on the rod and lock in place.

ST/1


1. First assemble the guard and place it onto the grinder so you can see where it needs mounting.
2. Mark where the hole needs drilling.
3. Drill the fixing hole.
4. Slide the fixing bar through the hole and tighten the nuts to lock it in position.
5. Adjust the guard height and tighten the locking nut.

Important

Check visors for cracking or weakening daily before use.

Some cleaners and coolants can weaken polycarbonate so please check with your supplier before use.

We recommend replacing the visor every 3 years.

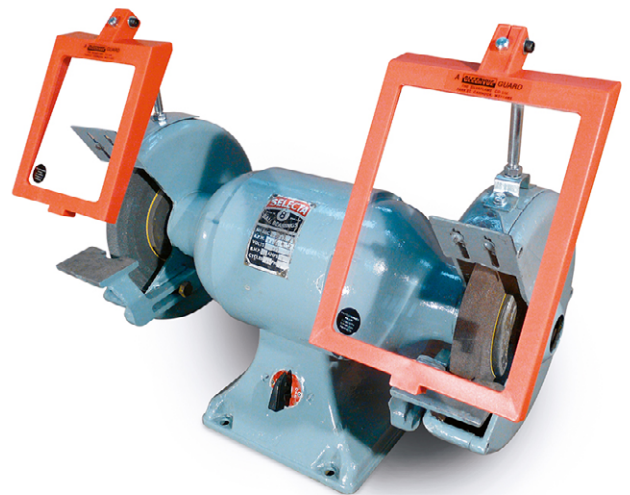

SILVAFLAME
READY TO USE
POLYCARBONATE
CLEANER

See website for details



For additional technical information or spare parts - Please contact us, we will be happy to help

SILVAFLAME-CLEERVUE COMPANY LIMITED

22, Park Street, Bridgtown, Cannock, Staffordshire, WS11 0BX. UK

T: 01543 431060 F: 01543 509140

e-mail: enquiries@silvaflame.com / silvaflame@cleervue.com

Manufacturers of MACHINERY SAFETY GUARDS



British made for
over 70 years

